

WHEN WATER COUNTS



water meter atlantis

atlantis

WHEN WATER COUNTS

Single jet technology

MID approval

Starting flow form 5 l/h

Magnetic transmission



Convertible into a Smart meter

Brass or composite manufactured

High accuracy R160H / R200H

Rotating display **360**°

Installation UO/DO

Hydrodynamic design

Hidroconta's Atlantis water meter is based on the single jet velocity principle.

The water enters the metering chamber forming a single jet that pushes the turbine blades, producing the movement of the turbine. The rotation of the turbine is transmitted by magnetic transmission, through a shaft and gears, to a head which accumulates the volume of water that has circulated through the meter in its totaliser.

MID approval

Hidroconta's Atlantis meter exceeds the metrological requirements based on Directive 2014/32/EU so they are normally used for the totalisation and control of domestic water consumption.

At Hidroconta we carry out strict tests on the meters to ensure their quality and accuracy.

Technical specifications

- ✓ For cold water up to 30 C°.
- ✓ Direct reading on 5-digit roller indicating m³.
- ✓ Completely dry, non-submerged clockwork.
- Magnetic transmission protected against external magnetic fields.
- ✓ Dial can be turned manually: For reading in any position.
- ✓ MID drinking water approval. Directive 2014/32/EU.
- Straight sections no required at the input and output of the UO-DO water meter counter.
- Pre-equipped with inductive pulse emitter.

atlantis

High Protection

Atlantis has a security system that prevents the disassembly of the ring that fixes the dial of the meter and the access to the adjustment device, so there is no possibility of disassembling or altering the water meter or its adjustment device. Our water meters include a special shielding that prevents any possible fraud in the transmission and therefore in the result of the reading.

Dial








Horizontal working range Vertical working range Maximum working pressure Installation conditions



Nº	DESCRIPTION	MATERIAL
1	Cover	ABS
2	Casing	ABS
3	Dial	Assembly
4	Anti-fraud rings	Iron
5	Fixing ring	PPO
6	Separating plate	PPO
7	O-ring	NBR
8	Turbine	PP
9	Body	Copper alloy or composite
10	Filter	PP

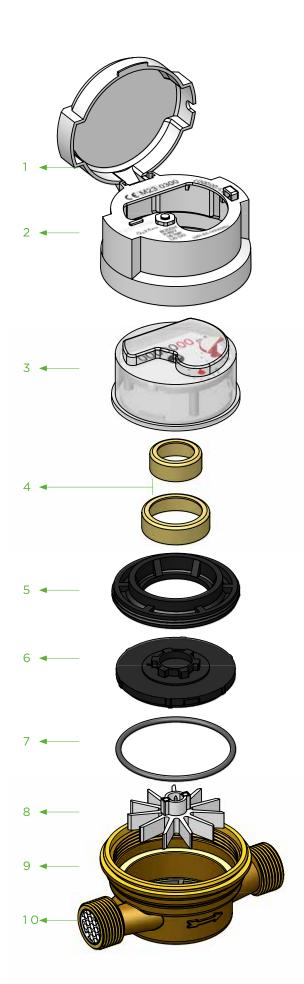

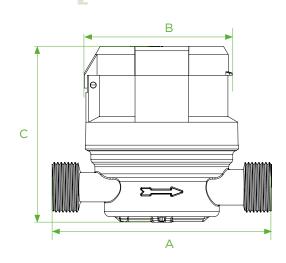

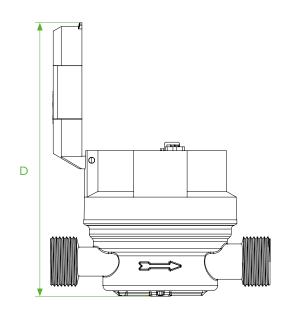

CAL	IBRE	А	A (with fittings)	В	D	С	WEIGHT WITH FITTINGS	WEIGHT WITHOUT FITTINGS	THREADED CONNECTIONS	MATERIAL
mm	inch.			mm			K	g		
13	1/2"	115	186	79	145	95	0,68	0,5	G 7/8" x 3/4 BSP	Brass
		110	184	79	142	92,6	0,62	0,5	G 3/4" BSP	Brass
15	1/2"	115	189	79	142	92,6	0,63	0,5	G 3/4" BSP	Brass
15	1/ 2	115	189	79	142	80,0	0,3	0,25	G 3/4" BSP	Composite
		190	264	79	142	92,6	0,82	0,68	G 3/4" BSP	Brass
20	3/4"	130	222	79	147	96	0,83	0,6	G 1" BSP	Brass



	DIAM	IETER	PCS. PER BOX	DIMENSIONS PER BOX (CM)		GROSS WEIGHT	WATER METER MATERIAL	
	mm	inch.		Length	Width	Height	Kg	
	13 1/2"	1/2"	1	13	9	10,5	0,66	Drace
		20	50	29,5	25,5	13,00	Brass	
	15 1/2"		1	13	9	10,5	0,62	Brass
		1/2"	20	52,5	28	18,8	13,06	Diass
		1/ 2	1	-	-	-	-	Composite
		20	52,5	28	18,8	6,53	Composite	
	20	3/4"	1	14,5	8,5	10,5	0,82	Brass
20 .	20	3/4	20	44,5	23	30,5	16,34	Diass



atlantis


Pulse output

Compatible with wired pulse output (ARCE).


RELAY CHARACTERISTICS

Pulse value	1 pulse 10L
Maximum resistance activated	5 Ω
Maximum load voltage	60 Vdc
Maximum load current	100 mA
Insulation voltage test	3750 Vrms



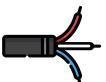

White = common. Blue = positive pulse. Red = negative pulse.

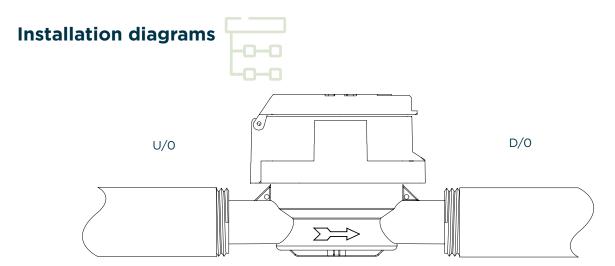

Installation instructions

Water meters should always be operated full of water. A minimum pressure of 0.3 bar is recommended at the outlet of the meter to ensure that it is completely filled with water. Install at a lower level with respect to the slope of the rest of the pipe, in this way, the formation of air pockets inside the pipe will also be eliminated.

If there is air in the pipeline, air release valves must be fitted to avoid incorrect readings. If the water in the pipeline contains large suspended particles, an initial screening filter should be installed. Provide a shut-off valve upstream of the water meter to facilitate maintenance and/or repair of the meter.

Before installing a water meter in a new pipe, it is recommended to drain it to remove particles.

Do not force the water meter during installation, avoid tensile and torsion stresses, especially in the threaded connections.



Working conditions

WATER TEMPERATURE RANGE

0,1 °C - 30 °C

MAXIMUM PRESSURE

≤ 16 bar For brass body

≤ 10 bar For composite

Maximum permissible error


RANGE	ERROR (%)
$Q_1 \le Q \le Q_2$	± 5%
$Q_2 \le Q \le Q_4$	± 2%

Technical specifications

	CAL	IBRE	Q_4	Q_3	Q_2	Q_1	STARTING FLOW RATE	MINIMUM READING	MAXIMUM READING	RATIO	MATERIAL
	mm	inch	m³,	/h	I,	/h	l/h	m	1 ³		
Ī	13	1/2"	3,125	2,5	25	15,62	6	0,00002	99.999	R160H	Brass
	13	1/2"	3,125	2,5	20 100	12,50 62.50	5	0,00002	99.999	R200H R40V	Brass
	15	1/2"	3,125	2,5	25	15,62	6	0,00002	99.999	R160H	Brass Composite
	15	1/2"	3,125	2,5	20 100	12,50 62,50	5	0,00002	99.999	R200H R40V	Brass
	20	3/4"	5	4	40	25	6	0,00002	99.999	R160H	Brass
	20	3/4"	5	4	32 160	20 100	6	0,00002	99.999	R200H R40V	Brass

Pressure loss curve

Flow error curve

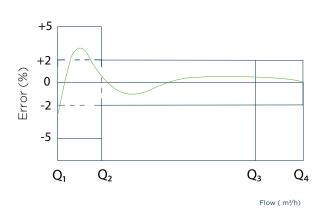



Automatic meter reading

Adding the IRIS communications module to the water meter will enable automatic remote readings. IRIS devices allow mechanical meters to access the world of IoT communications. Its great versatility allows it to be integrated with a wide range of meters.

The IRIS communications module is integrated with the Demeter system. It supports the integration of a wide range of devices using various communication technologies to suit the needs of the installation.



	® NB -loT
Belts	LTE NB2/B1/B2/B3/B3/B4/B5/B8/ B12/B13/ B17/B18/B19/ B20/B25/B28/B66/ B70/B85
Transmission power	23 dBm +/-2dB
Firmware Update	Via FOTA

∕ M <u>-Bus</u> _{n)}
868 MHz
OMS T1 and C1

CDDC

	LoRaWAN	
Modulation	CSS	CSS
Frequency	EU868* ISM band	ISM band US915, AU915, AS923**/ ***
Power	14 dBm	20 dBm
Sensitivity	168 dBm	168 dBm
Bandwidth	125 kHz	125 kHz
LoRaWAN Configuration	SF12	SF12
Bidirectional	Yes/Half-duplex	Yes/Half-duplex
Encryption	AES128	AES128
Standardisation	LoRa-Alliance	LoRa-Alliance

	GPKS				
	- Quad-band: GSM850, ESM900, DCS1800,				
Frequency	PCS1900.				
	- The module can search for these frequency				
	bands automatically.				
	- The frequency bands can be configured by				
	AT command.				
	- GSM Phase 2/2+ compliant				
Transmission power	Class 4 (2W) on GSM850 and EGSM900 Class 1 (1 W) on DCS 1800 and PCS1900				
Bidirectional	Yes/Half-duplex				
SIM	MFF2 eSIM and nano SIM card supported				

★ sigfox							
Geographical availability	RC1*	RC2**	RC4***				
Modulation	BPSK	BPSK	BPSK				
Frequency	Tx Freq. : 868.13MHz Rx Freq : 869.525MHz	Tx Freq: 902.2MHz Rx Freq: 905.2MHz	Tx Freq : 920.8MHz Rx Freq : 922.3MHz				
Power	14 dBm (max) @600bps	+24dBm (max.) @600bps	+24dBm (max.) @600bps				
Sensitivity	-127dBm @600bps	-129dBm(min.) @600bps	-129dBm(min.) @600bps				
Bandwidth	100 Hz	100 Hz	100 Hz				
Bidirectional	Limited/Half- duplex	Limited/Half-duplex	Limited/Half- duplex				



Reverse flow alarm:

Reverse flow detection. Only available for the inductive pulse version. Configuration adjusted by communications.

Leakage alarm:

Detection of continuous consumption for a maximum period of time. Configuration adjusted by communications.

Water meter stopped alarm:

The alarm is activated if no consumption is detected for a maximum period of time. Configuration adjusted by communications.

Under-dimensioned water meter alarm:

Detection of flow rate higher than the overload flow rate for a maximum period of time. Configuration adjusted by communications.

Water meter tampering alarm (tampering):

The alarm is triggered in case the device is not mounted on the meter. Only available for the inductive pulse version. Optional upon request.

Battery status alarm:

Various battery alarm levels are activated depending on the remaining battery life.



Operating profiles based on the recording consumption and communications records requirements:



- · Normal-24: Sending data every 24 hours and recording every hour.
- · Normal-8: Sending data every 8 hours and recording every hour.
- · Medium: Sending data every 12 hours and recording every 30 minutes.
- · Extreme: Sending data every 6 hours and recording every 15 minutes.

MODE	AUTONOMY	COMUNICATION	DATA HISTORY RECORD
Normal -24	12 years	24 h	1 h
Normal -8	TBD	8 h	1 h
Medium	TBD	12 h	30 min
Extreme	TBD	6 h	15 min

 $^{^{*}}$ TBD (to be determined). 24 maximum storage and sending readings: each sending allows accumulating up to 24 values for each communication interval.









1. Which is the diference between dry dial, wet dial and semi-dry water meter dial?

On water meters with dry dial the reading mechanism (clock) is tightly separated from the wet chamber of the meter.

On Wet dial water meter the watch is totally immersed in the fluid.

For water meters with semi-dry dial, the reading mechanism is totally immersed in the fluid but the dial is partially separated and protected by a sealed capsule.

2. What are the ranges of measurement and precision?

The measuring range of the meters is determined by the Directive MID 2014/32 $\,/\,$ UE establishing the ratio between the value of the permanent flow (Q3) and that of the minimum flow (Q1). The water meter can measure up to the maximum flow rate (Q4) for short periods of time without deterioration.

The maximum permissible error, positive or negative, in volumes between the transition flow (Q2) (included) and the overload flow (Q4) would be 2% with a water temperature 30 ° C.

The maximum permissible error, positive or negative, in volumes between the minimum flow rate (Q1) and the transition flow (Q2) (excluded) would be 5%.

3. The MID directive and its compliance

The MID Directive (2014/32 / EU Measuring Instruments Directive) is a directive of the European Union whose purpose is to harmonize the different aspects of Legal Metrology in the member states.

The most important aspect of this directive is that equipment in possession of a MID certificate can be used in the EU.

4. How should the single jet water meters be installed?


HIDROCONTA single jet counters do not require special installation conditions.

If you have any doubt about the installation of these equipments, it is recommended to follow the instructions indicated in the technical data sheet of the product.

EV.12



WHEN WATER COUNTS

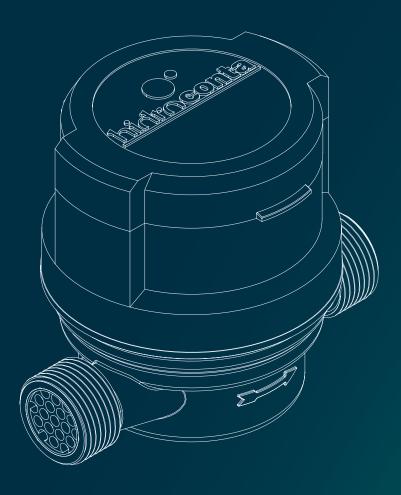

water meter atlantis

Ctra. Sta Catalina, 60 Murcia (30012) España T: +34 968 26 77 88





Hidroconta disclaims liability for errors in the information contained in this document, which is subject to change without notice. All rights reserved.

Copyright. 2023 HIDROCONTA.