

WATER METERS



Plastic series



hidroJet
hydraulic technology




Hydrodynamic design

Multi-jet technology ensures uniform distribution of load on the turbine located thanks to the water inlet diffuser. The movement activates the magnetic transmission that will give the final reading of the volume.



High protection

Hidroconta Hydrojet watermeters are designed to avoid external manipulation by magnetic fields. They have a special shield that covers the dial and prevents any possible fraud.

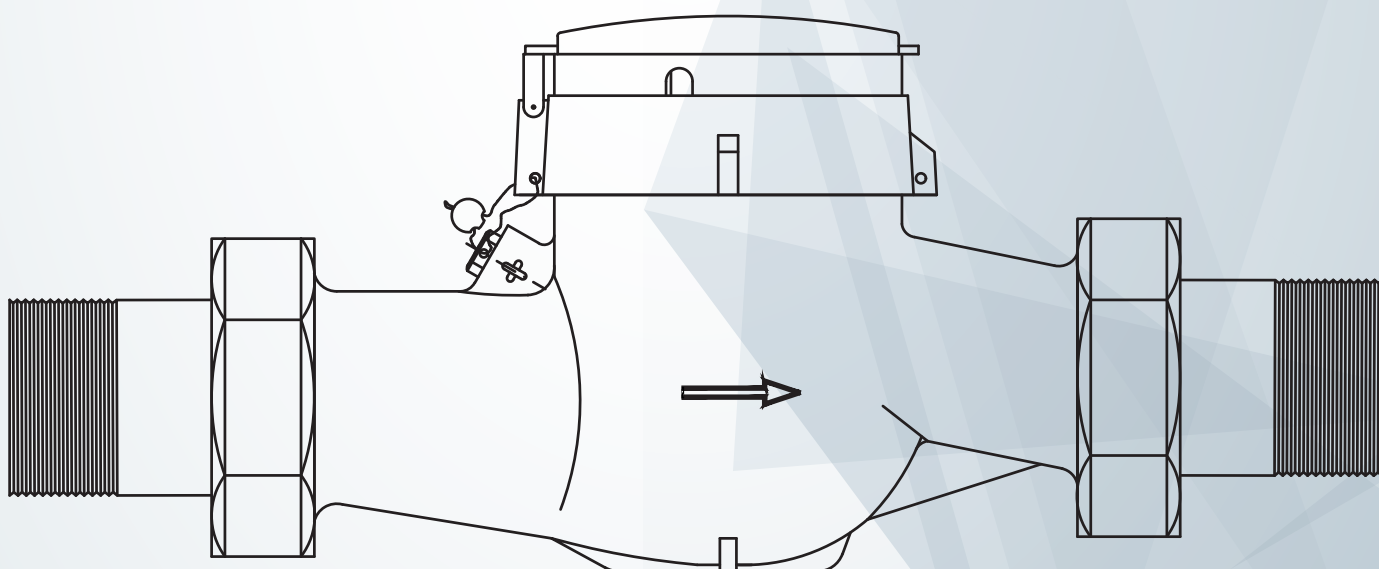



Certificate M̃ for irrigation

Thanks to the homologation acquired, the low maintenance needs and the reduced pressure losses this product is suitable for totalizing water for irrigation and hydraulic public domain.



Pre-equiped

The Hidrojet dial has a pre-installation that allows to place a pulse emitter, without having to stop the counter, this will give information of the reading.






Dial

Approval for use in irrigation water and hydraulic public domain.

5 lining figures dial.

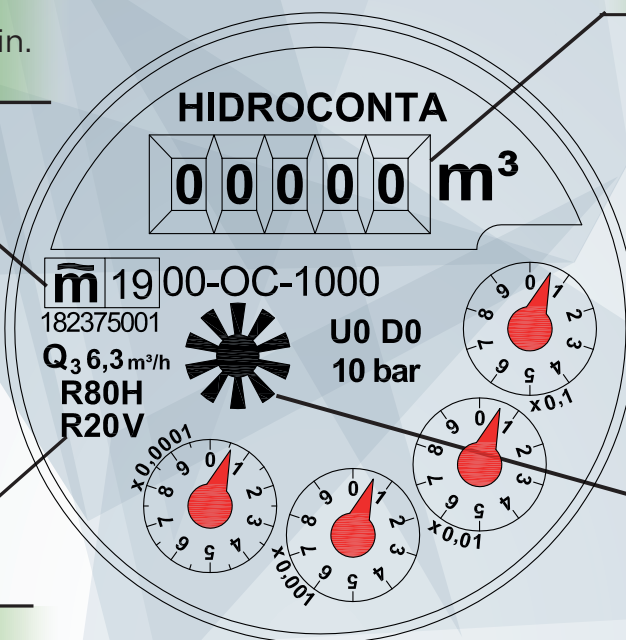

Accuracy ratio:
 - R80 in horizontal position.
 - R20 in vertical position.

Rotary starwheel for leak detection.









Technical specifications

- ✓ - Glass-filled polyamide body.
- ✓ - Turbine and dial in thermoplastic material.
- ✓ - Vacuum dial to prevent condensation of water.
- ✓ - Magnetic transmission protected against external magnetic fields.
- ✓ - Pre-installation of pulser for remote reading. Quick connection without stopping or dismantling the meter.
- ✓ - High mechanical and wear resistance .
- ✓ - Ratio R80 in horizontal and Ratio R20 in vertical position.
- ✓ - Straight sections are not necessary at the Hidrojet input or output U0-D0.



Disassembly


Nº	Description	Material
1	Cover	Plastic
2	Pin	Brass
3	Flange cover dial	Plastic
4	Flat seal	Plastic
5	Crystalline	Metraquilate
6	O-ring	Silicone
7	Dial	Assembly
8	Magnetic Gear	Compound
9	Magnetic ring	Iron
10	Magnetic ring	Iron
11	Dipper	Plastic
12	Flat seal	Rubber
13	Turbine	Compound
14	Distributor	Poliamide
15	Filter distributor	Poliamide
16	Filter joint	Silicone
17	Body	Poliamide

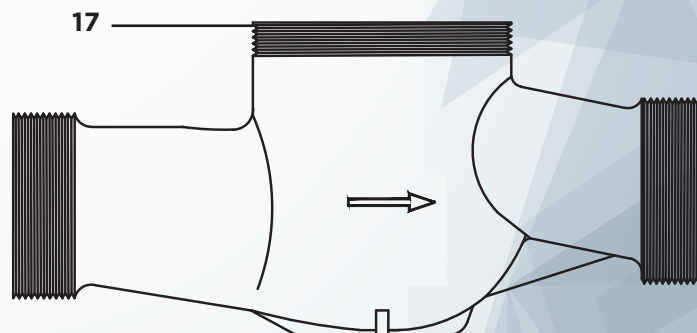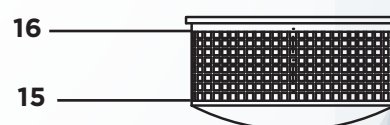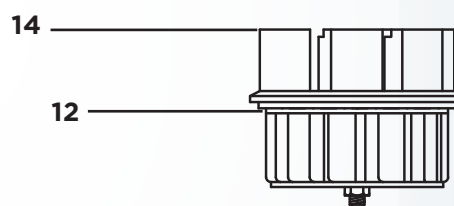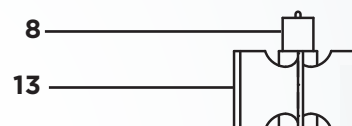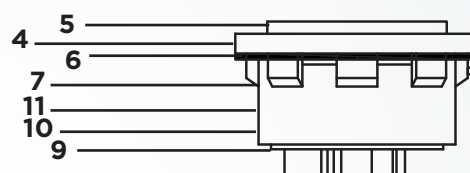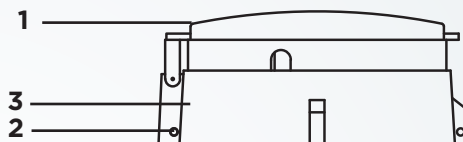



Dimensions

Calibre		L1	L2	B	H	Weight with fittings	Weight without fittings	Threaded fittings
mm	Pulg.	mm				Kg		
20	3/4"	195	296	94	128	0,645	0,54	G 1" BSP
25	1"	225	342	100	137	0,838	0,68	G 1-1/4" BSP
32	1-1/4"	230	352	100	130	0,966	0,76	G 1-1/2" BSP
40	1-1/2"	245	370	125	170	1,599	1,31	G 2" BSP

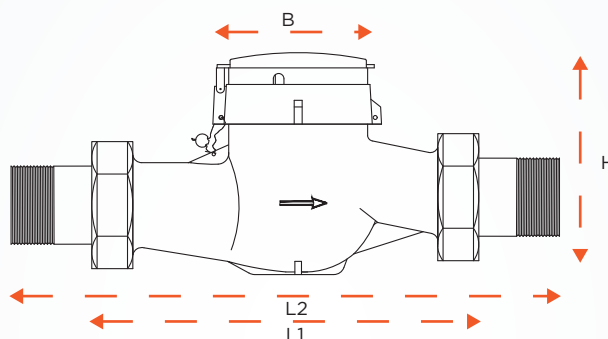

Packing

Calibre	UNITS PER BOX	BOX DIMENSIONS (CM)			PESO BRUTO
		Length	Width	High	KGS
DN 20	10	53	21	26,5	7,25
DN 25	10	54	28	30	9,7
DN 32	10	56	28	30	11,3
DN 40	2	27	26,5	20	3,48



Working conditions

Room temperature	Maximum pressure
0.1 °C ~ 40 °C	≤ 10 bar



Maximum permissible error

Range	Error (%)
$Q_1 \leq Q < Q_2$	± 5%
$Q_2 \leq Q \leq Q_4$	± 2%




Technical specifications

Calibre		Q ₄	Q ₃	Q ₂	Q ₁	Minimum reading	Maximum reading	Ratio
mm	Inch	m ³ /h				l	m ³	
20	3/4"	5,00	4,00	0,08	0,05	0,05	99.999	R80H
				0,32	0,20			R20V
25	1"	7,87	6,30	0,126	0,787	0,05	99.999	R80H
				0,504	0,315			R20V
32	1-1/4"	12,50	10,00	0,20	0,125	0,05	99.999	R80H
				0,80	0,50			R20V
40	1-1/2"	20,00	16,00	0,32	0,20	0,05	99.999	R80H
				1,28	0,80			R20V




Pressure loss curve

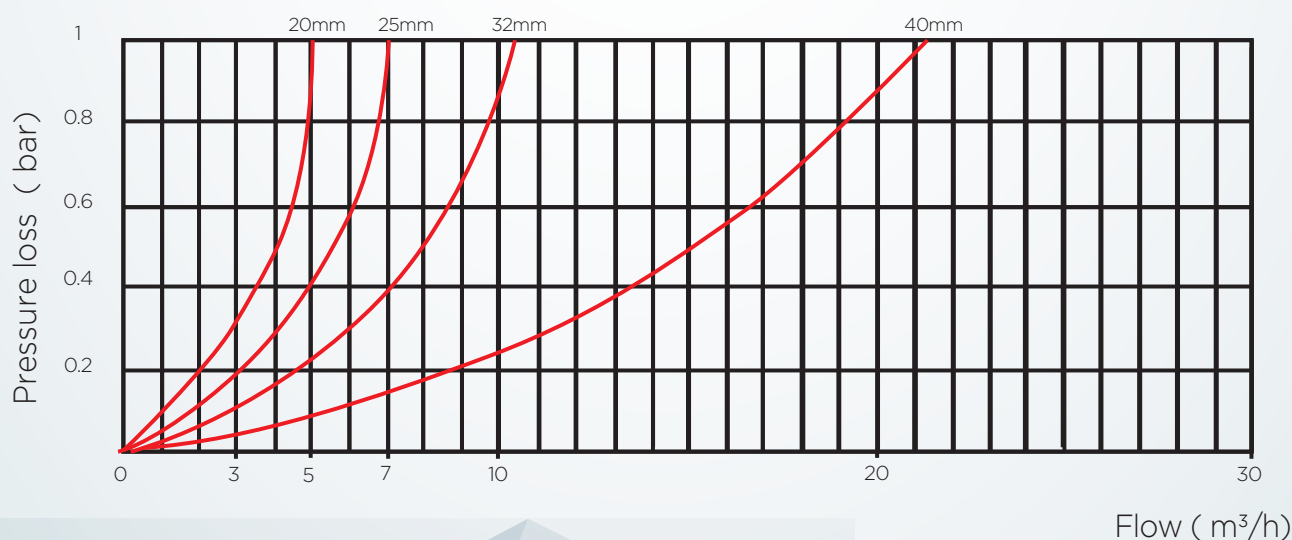



Flow error curve

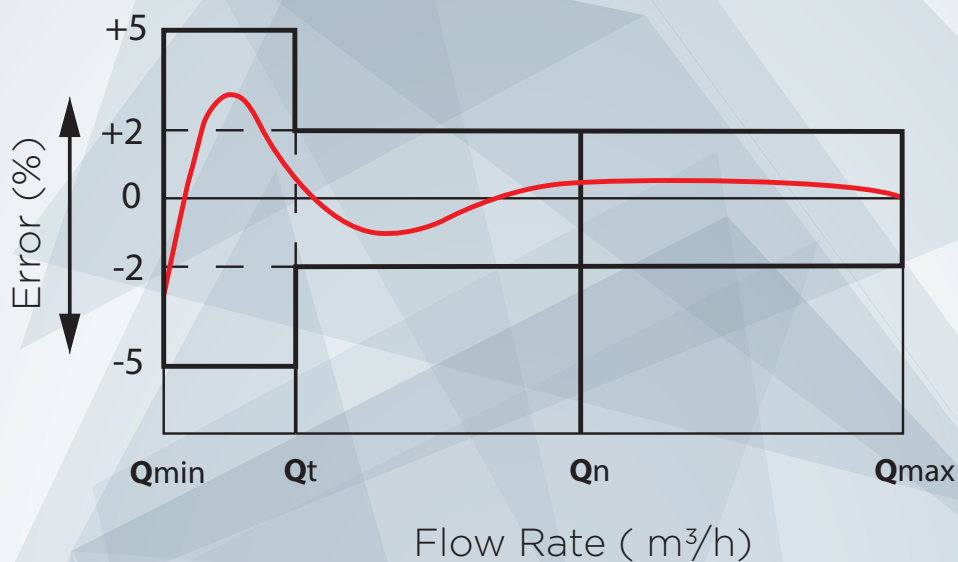


Pulse emisor

Type	Reed sensor
Pulse value	Standar 1 pulse = 100 l
Min. amperage to close contact	0 mA
Max. amperage to close contact	100 mA
Closed contact impedance	< 1 Ω
Open contact resistance	~∞
Max. supportable voltage	24V
Max. stabilization time	100us
Close contact lapsed time	40% of cycle



Diagrams for installing

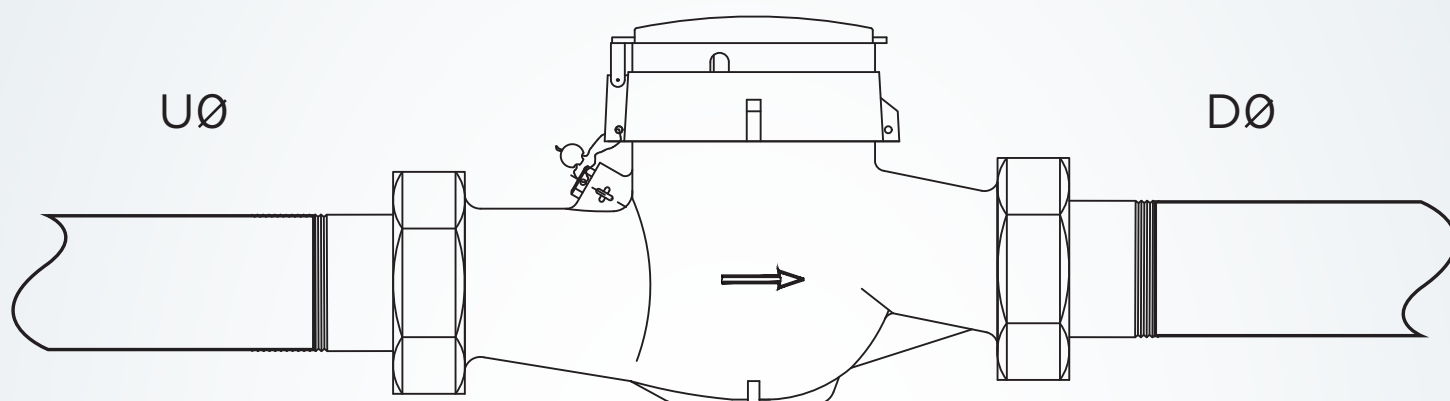

Straight sections are not necessary at the Hidrojet input or output UØ-DØ.

Installation instructions

- Place the meter so that the arrow matches the direction of the water flow.
- The meters must always be full of water when operating, minimum pressure 0,3 bar, and installed below the slope of the rest of the pipeline. This stops air pockets from forming inside.
- If there is air in the pipeline, suckers must be fitted to avoid incorrect readings. If the water in the pipeline contains large suspended particles, an initial screening filter should be installed.
- Fit a valve upstream from the meter to facilitate maintenance or repair.
- A new pipeline should be drained before fitting a meter to eliminate particles.
- Do not force the meter during assembly; avoid tension or torsional stress, especially to the threaded connections..
- The meter connection can be installed on horizontal or vertical pipe.



Plastic series

WHEN WATER COUNTS
CUANDO EL AGUA ES LO QUE CUENTA

www.hidroconta.com

Ctra. Sta Catalina, 60
Murcia (30012)
España

T: +34 968 26 77 88
F: +34 968 34 11 49

hidroconta@hidroconta.com

Hidroconta disclaims responsibility for errors in the information contained in this document, which may be modified without notice. All rights reserved. © Copyright. 2016 HIDROCONTA, S.A.

